



\*If the chronograph hand positions are incorrect, pushing the RESET button will return the hands to their appropriate positions.